Windows 10 IoT Enterprise LTSC 2021 Operating System

Recovery Guide



Notes, cautions, and warnings

(i) NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2023 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

Chapter 1: Steps to configure USB key for ISO Imaging	4
Step 1: Pre-requisites:	
Step 2: Download and install the Dell OS Recovery Tool	
Chapter 2: Re-Imaging or Deploying the recovery image created in a USB drive	. 8
Chapter 3: Capturing image to the created USB drive	.11

Steps to configure USB key for ISO Imaging

Step 1: Pre-requisites:

Steps

- 1. Download the appropriate Windows 10 IoT Enterprise LTSC 2021 operating system ISO image from Dell Support page.
- 2. Download and install the Dell OS Recovery Tool (available for Microsoft Windows only).
- **3.** USB flash drive with at least 32 GB of free space.
- 4. Administrator user rights and at least 64 GB of available hard drive space to download the Dell operating system recovery image.
- 5. A wired network connection for network stability is recommended.
- 6. It is recommended to disable any anti-virus software during the download.

Step 2: Download and install the Dell OS Recovery Tool

Steps

1. Launch the downloaded Dell OS Recovery Tool and click INSTALL.



Figure 1. Dell USB Recovery Tool Application

2. Click CLOSE and launch the application from the desktop shortcut.

C Dell Update Package	×
Dell USB Recovery Tool Application	0
The update installer operation is successful.	
View installation Log	CEOSE
8 2009 - 2021 Dellinc. All rights reserved.	

Figure 2. Dell USB Recovery Tool Application

3. Click SWITCH TO ADVANCED RECOVERY.

US Recovery Tool		
la macinel Presserve	files I. Scherke semplem	
Manuar egi talaha Hading tabukit vilin yolut kyatamu Kalim generating her bang dari yokut ika Manuar ya	20 mar an garden Sant an shekda ∰H+20 innenn Sattara 'n diar a simila	de dar vien alle Britela Taracterio I.e. Taracterio I.e.
HORD Viet av te 200 viet (200 c) viet av de la 200 viet (200 c) viet a de set (

Figure 3. OS Recovery Tool

4. Browse to and select the appropriate downloaded ISO image and click **NEXT**.



Figure 4. OS Recovery Tool

5. Click BURN OS.

dever en Bretrer	1864 1 S. Sec 1975 Barr
Westign bug topological	pair each
considering and any ng the activity	In Transmission Prover California Constant Cons
you'll not be to the or your contractor	Tweeve under
PERTAINATION CAR OVER 2015 1-2 Mil	ent -
e l'a mar e valle de	50 second and 1.4 in states and a low efficiency mailed and endow take efficiency in a state of a second s Second second sec
	Excercise integral (in the website deviced defined on the Print, Circle 000, 000 LL 300 magnific backs 2.50

Figure 5. OS Recovery Tool

6. Wait for image registration to complete and click **Close**.





TTEP 2 DOWN, DAD AND ANY	Saving in USE inter	
Region December 20 Structurely will automatically download and save 15 year UBB down.	Participations -	
	Recording Energy Coston Image Swatheration Surchiss Examples and Devices Table	

Figure 7. OS Recovery Tool

7. Remove the USB drive. This completes the Recovery USB drive creation.

2

Re-Imaging or Deploying the recovery image created in a USB drive

Steps

- 1. Insert the Windows 10 IoT OS Recovery USB Key created into the USB port of the appropriate device.
- 2. Power on the device.
- 3. Press F2 to enter BIOS setup.
- 4. Enter the BIOS admin password to unlock the BIOS for any required changes. Dell default password is **Fireport**.

() NOTE: The screenshots depict an example of the BIOS screen in a Latitude 3440 device. The version information differs based on the application that you use to install. The screens may differ slightly based on the BIOS version on your device. The BIOS options that are mentioned will be similar, and must be checked and updated as per the requirements.

5. Go to Integrated Devices and enable the Enable USB boot support option. This option is enabled by default.

and we have		
institution in the second	inegrofie in	a.
Call Coll material control top top top top top top top top top top	Come → Title - state Title - state de often Title Madema Jackson - Jackson - State - State -	
Jano Brian Guine Angel Nang Kang ang Kang ang Kang ang Kang Kang Kang Kang Kang Kang Kang K	■ Internet Class ■ Internet Control ■ Internet Contret ■ Internet Control	
aai	Provide a final de la constance de la con	

Figure 8. Integrated Devices

6. Go to Storage, SATA/NVMe Operations and enable the ACHI/NVMe option. This option is enabled by default.

Con Westerner				
	Scoge			÷ ¢
C+ C×	DATA Prick Services			
man management	 A sector of the order to a sector to a se	 Andrewski Charles and the part for the set of the s	More the management of the Manufact many rest in a second second second second second transmission of the second second second second second to the second second second second second second second second second second second second second second second second second second second s	
		ng mitag ka ka ka mang na mang ka Miti na s		
	in the strand of a disc	00.4000.000000000000000000000000000000		

Figure 9. Storage, SATA/NVMe Operations

7. Go to Virtualization Support, set Enabler Pre-Boot DMA Support to OFF, set Enable OS Kernel DMA Support to OFF.

And Markenson		
10-00.PD-	(In askander Support	- C.
and the second	tral Hadi, dwile roles	
C+ CA	anne anno storget	
-	alex or even with a structure of the destructure of the st	
- particular - particular	982 S	
B-Ltr.		
at r	The Birds 7	
and a second	- MARANY SPACE	
114*	 Here, e.g. and here here, e.g., here yet or here \$255. Approximation of the here is a pro- 	80 11
an an An Bran S- Chapmel	 ■ 	
1971	No. of the second se	
A SAME CONTRACTOR	(a) the provided the complete trademost of the data provided that are provided with the provided of the trademost of the data was of a statistic trademost weights that the trademost of the trademost of the trademost of the trademost.	0.000
10 m 10 m	A PROPERTY AND A PROPERTY	
	Repaired (Repaired Repaired Re	
	10 - Index of the second se	
	Bit many set (and Many and Schemes a Grandman of Landy as "intellighted set and well with the set of a dimension (f) does not a first set of the set of	the property of
		1.1
ana -	Larster moved	

Figure 10. Vitalization Support

- 8. Click **Save** and then click **Exit**.
- 9. When the device reboots, press F12 to trigger the Boot Menu and select the bootable Windows 10 IoT OS Recovery USB Key and press Enter.

and the second			COMPACT OF CONTRACTOR
Jan I fan Roos Setting I. Gebiet oan in Frank and Alama and Set	For the and Tandas		
And the second second second second	Bud agent in the case of a copy bay		
2011.	1111 M	2000.0	Control B
Response for the second state of the second st	$C_{\rm eff}(\mu)$ (Fig.) = $(-\infty, -1)$ ($(-\infty, -1)$) = $(-1)^{1/2}$ ($(-\infty, -1)^{1/2}$) =	Terrary and the barrow	for the main set with the set of the set of the
Carlos Contration	Internation Y	distantia .	and segments
Jan manage	ten eta netera eta	to a sufficient de la constant	ide and a
janta an in			
terative and a second second			
CARCERTON DE LA COLONIA. COLONIA DE COMPANY			
CALCULATE STREET, AND CALCULATER CA.			

Figure 11. Boot Menu

10. Select the operating system image and click **OK**. The installation process starts.



Figure 12. USB Imaging tool

The image that is shown above is an example image. The screen reflects the image that you created in the USB pen drive.

- **11.** After the installation is completed, the device reboots.
- **12.** Remove the operating system Recovery USB drive.
- 13. Press F12 to trigger the Boot Menu and select SSD/HDD storage where Win 10 IOT OS is installed.
- 14. Press Enter.

Windows IoT boots to the desktop.



Capturing image to the created USB drive

Steps

- 1. Insert the Windows 10 IoT OS Recovery USB Key created into the USB port of the appropriate device.
- 2. Power on the device.
- 3. When the device reboots, press F12 to trigger the Boot Menu and select the bootable Windows 10 IoT OS Recovery USB Key.
- 4. Press Enter.

200 - 10 - 10 - 22 - 10 - 10 - 10 - 10 -			Language a series of
Care i fan Roop Setting i Senat fan Yr Sternans mann an servi i S	For B and Tandan Strate Spectra B. Strate researches are particular	one as a second the case of the second	
1993. Binang dalam Pranto sebagai ang ka Santa dalam tang dikabagai ang ka Carta da ang dikabagai ang ka	too af late Carao at an an an an an an an an An an an	onav () Tarana () ja kanav	to and the second secon
ar bad na Garantin tang Garantin tang Manatan ang sata tang manatan ang sata	Tpremision. Completence pre		ini alpeat Ida secon

Figure 13. Pre-Boot tasks

5. Select Pull Device Image to USB Drive.

	Telescolt, control	
Erana e Frie des de Trans des Trans des Trans des Erans des Erans des	A de la complete de 2000 Note de la complete de 2000 Note de la complete de la complete de la complete de la complete de	
10.000		

Figure 14. Pull Device Image to USB Drive

6. Click OK on the Compressing and Pulling Image to USB drive screen.

		Sel Cyce VIII in an	is Test		
	age to your Array was to app				
Nere a fair - read - read	Law of the second				
	No. At the L				
	Normalia, Special et al.				
				1005-1005-1000-007	

Figure 15. Compressing and Pulling Image to USB drive

Image Capturing starts and displays the progress screen.

7. After the image capture is completed, remove the bootable Windows 10 IoT OS Recovery USB Key and click Restart.

*		Status active active	
Source of MARTING and an Annual Marting Constraint and the Source of Source Source of Source	1040		
	120		
		~	
		(λ)	
		\sim	
		- Andrew Wilder W. Hern	
		And the Observer of the Data strength	

Figure 16. USB Imaging tool screen