

Pro Lite

LCD Monitor

ENGLISH



iiyama | Servicecard





Dear user, we congratulate you on the purchase of your iiyama LCD.

please check the iiyama website. For details on warranty and locally used pixel policies that apply directly after installation of your product

your local support centre found at https://iiyama.com To report a fault, please contact

Things to check before you call the iiyama information line

I if the power cable is connected securely and turned on?

if the display has been turned on?

If the signal cable is connected securely and the correct input selected?

I if the computer has been restarted with the display connected?

If the graphics card is correctly installed with the latest drivers possible?

if the correct native resolution has been selected via 'Display Properties'?

If the R/G/B signal configuration is correct?

if the displays On Screen Menu is shown?

if the correct brightness and contrast settings have been set?

if given display tolerances and compatibility have been considered?

if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

| model number *

purchase receipt and serial number *

name and address for collection

telephone/fax number, for availability during the day

convenient collection date (date, time)

short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

Feedback on health and safety issues

through our website. You can also contact us by calling +31 204460404. After receiving your feedback, we will ask the responsible unit to evaluation for improvements. handle it as soon as possible and a dedicated person will get back to you. Your feedback will also be recorded and incorporated into our If you have any health and safety concerns or questions about the product (including when using the product), please contact iiyama support

* see the identification plate on the back of the case.



CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No.: PL8614U / PL7514U / PL6514U



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: https://iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- Eprel registration number

TE6514MIS-B2AG: 1941671 TE7514MIS-B2AG: 1941902 TE8614MIS-B2AG: 1941952

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD MONITORS	3
CUSTOMER SERVICE	5
CLEANING	5
BEFORE YOU OPERATE THE MONITOR	6
FEATURES	6
CHECKING THE CONTENTS OF THE PACKAGE	6
UNPACKING	7
SPECIAL NOTES ON THE TOUCH PANEL	7
INSTALLATION	8
CONTROLS AND CONNECTORS : MONITOR	10
FUNCTIONS OF THE REMOTE CONTROL	13
PREPARING THE REMOTE CONTROL	14
BASIC OPERATION	16
CONNECTING YOUR MONITOR	19
COMPUTER SETTING	22
OPERATING THE MONITOR	23
ADJUSTMENT MENU CONTENTS	25
STANDBY FEATURE	50
TROUBLE SHOOTING	51
RECYCLING INFORMATION	52
APPENDIX	53
SPECIFICATIONS: ProLite TE8614MIS-B2AG	53
SPECIFICATIONS: ProLite TE7514MIS-B2AG	55
SPECIFICATIONS: ProLite TE6514MIS-B2AG	57
DIMENSIONS : ProLite TE8614MIS	59
DIMENSIONS: ProLite TE7514MIS	59
DIMENSIONS : ProLite TE6514MIS	60
COMPLIANT TIMING	60

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

■ The following symptoms are normal with LCD monitors and do not indicate a problem.

NOTE

- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- This LCD cannot be used outdoors.
- This LCD cannot be used with the screen facing upwards.
- If you use a cable longer than the supplied one, the picture quality is not guaranteed. Touch function can be disrupted if the USB cable length exceeds 3m.

USAGE CONFIRMATION

The display is compatible for usage in Landscape applications.

IMAGE PERSISTENCE / IMAGE STICKING

Please be aware that all LCD screens can experience Image Persistence or Image Sticking. This occurs when a residual image remains visible on a screen when static images are displayed for long periods of time. LCD Image Persistence is not permanent but constant images being displayed for a long period of time should be avoided.

To counteract Image Persistence, turn off the monitor for as long as the previous image was displayed, so if an image was on the monitor for 1 hour and there is evidence of a residual or "ghost" image, you should turn off the monitor for 1 hour in order to clear the residual image.

For all LFD products, ijyama recommends displaying moving images and utilising a moving screen saver at regular intervals whenever the screen is idle. You could also turn off the monitor when not in use to assist the prevention.

Other ways to reduce the risk of Image Persistence will be to utilise the FAN-on function (if available), Low Backlight and Low Brightness settings.

FOR EXTENDED USE AS A PUBLIC DISPLAY

■ Image Sticking on LCD Panel

When a static image is displayed for hours, an electric charge trace remains near the electrode inside the LCD producing a "ghost" image. (Image Persistence).

Image Persistence is not a permanent feature.

■ Recommendations

To prevent Image Sticking and promote longer life expectancy of display, we recommend the following:

- 1. Avoid static images displayed for long periods change static images on continuous loop.
- 2. Turn off monitor when not in use, either by remote control or use Standby or Schedule functions.
- Check the Monitor Menu Settings for "Pixel Shift" etc. and activate it when available. This will reduce the Image Sticking Effect.
- 4. When monitor is installed in high ambient temperature environment(s) or in an enclosed position, utilise the Cooling Fan, Screen Saver and Low Brightness functions.
- 5. Suitable ventilation for any monitor is an expectation of any installation climate control systems may need to be employed.
- We strongly recommend utilisation of active cooling with fans for long operation times or high ambient temperature environments.

CUSTOMER SERVICE

NOTE

■ If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

CAUTION

■ For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen

Thinner Benzine Abrasive cleaner Spray-type cleaner Wax Acid or Alkaline solvent

■ Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET

Stains can be removed with a cloth lightly moistened with a mild detergent solvent.

Then wipe the cabinet with a soft dry cloth.

LCD

Periodic cleaning with a soft dry cloth is recommended.

SCREEN

Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ♦ Supports Resolutions up to 3840 × 2160
- High Contrast 4000:1 (Typical: without glass) / Brightness 435cd/m² (Typical: without glass): ProLite TE8614MIS / ProLite TE6514MIS
- ◆ High Contrast 5000:1 (Typical: without glass) / Brightness 435cd/m² (Typical: without glass): ProLite TE7514MIS
- Digital Character Smoothing
- Automatic Set-up
- USB Type-C / RJ45 Connectors
- USB Power Delivery supports up to 100W
- ◆ 2 × 8W + 2 × 18W (Typical) Stereo Speakers
- VESA Mounting Standard (800mm×600mm) Compliant : ProLite TE8614MIS
- VESA Mounting Standard (800mm×400mm) Compliant : ProLite TE7514MIS
- VESA Mounting Standard (600mm×400mm) Compliant: ProLite TE6514MIS
- Glass with AG coating

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local liyama dealer or regional iiyama office.

- Power Cable*
- HDMI Cable
- Remote Control
- Battery (2pcs)
- Cable ties (For cable management, 6pcs)
- Mounting bracket for NUC ■ Safety Guide

- Touch USB Cable
- Touch Pen (Dual head: 4pcs)
- Mounting bracket for webcam (1set)
- Quick Start Guide

CAUTION

All quarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.



CAUTION

Moving the monitor requires at least two people. If not, it may drop and could result in a serious injury.

SPECIAL NOTES ON THE TOUCH PANEL

CAUTION

Permanent damage can occur if Sharp Edged, Pointed or Metal items are used to activate Touch. This could invalidate any remaining warranty.


We recommend you use a plastic stylus (tip ø2mm or over) or finger.

INSTALLATION

CAUTION

- Follow the manual instructions for the type of mount you have selected. Refer all servicing to qualified service personnel.
- Moving the monitor requires at least two people.
- Before installation, please make sure the wall is strong enough to hold the necessary weight of the display and the mount.

[WALL MOUNTING]

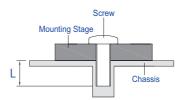

CAUTION

When using the wall mounting, consideration of thickness of the mounting stage needs to be taken. Tighten the M8 Screws (4pcs) which "L" length is 25mm to fasten the monitor. Using a screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor


[INSTALLATION NOTE]

The touch kit of this monitor is an optical device that utilizes infrared light source and sensitive sensors for touch detection.

Notice the incident light that contains large quantities of infrared light may affect touch screen operation and performance.


Please install it with care as follows to ensure reliable touch performance.


Intense light / Specular light / Focus spotlight / Wide spread light / Direct sunlight / Indirect sunlight from the window and/or the glass door. / Not install the touch monitor right under the light source.

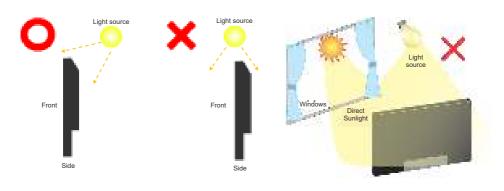


[ROTATING THE DISPLAY]

It is designed to be compatible in landscape mode.

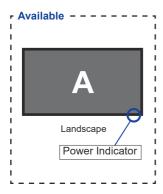


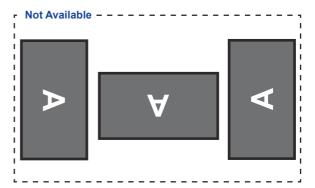

CONTROLS AND CONNECTORS: MONITOR

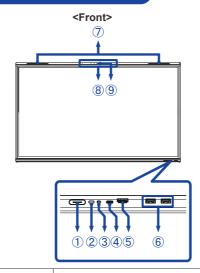

	Power Button ()		Power Off Pressing and holding the Power Button on the front for 3-5 seconds.			
		White	Normal Operation			
1	Power Indicator	Red	Standby Mode When the power indicator light is lighting red, the display is in Power Save Mode. To turn the screen back on, you can press the power button on the front or the remote control.			
		Red & White Flashing slow	The Screen Off function is active. To turn the screen back on, you can touch the screen or any button on the remote control.			
		Red & White Flashing fast	Going to the Standby Mode or system is updating.			
2	Remote Sensor					
3	Light Sensor					
4	TYPE C2 IN	USB Type-C Connector USB3.2 Gen 1 (5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) DisplayPort 1.2 ALT mode / Touch / Power Delivery 100W				
(5)	HDMI4 IN	Standard HDMI Connector HDMI2.0 3840×2160 60Hz HDCP 2.3				
6	USB3.2	USB Type-A Connector USB3.2 Gen 1 (5Gbps, 5V, 900mA)				
7	Speakers (Facing forward, 8W×2)					
8	Microphone Array *	Vicrophone Array *				
9	Microphone Indicator	White Microphone is in used.				

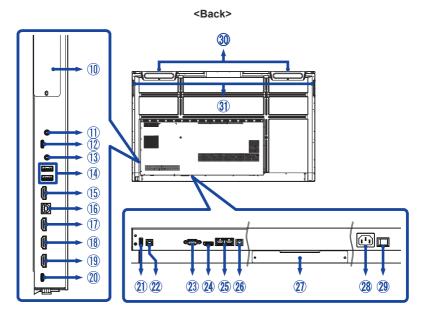

10	Option PC module slot				
111	AUDIO IN	Audio Connector ø 3.5mm RTS mini jack			
12	USB-C3.2 OUT	USB Type-C Connector USB3.2 Gen 1 (5Gbps, 5V, 1A)			
13	AUDIO OUT	Audio Connector ø 3.5mm RTS mini jack			
14)	USB3.2	USB Type-A Connector USB3.2 Gen 1 (5Gbps, 5V, 900mA) Touch Out for HDMI OUT			
15	HDMI OUT	Standard HDMI Connector HDMI2.0 3840×2160 60Hz HDCP 2.3			
16	TOUCH1 (for HDMI1/HDMI2)	USB Tybe-B Connector USB2.0 (480 Mbps, 5V, 500mA)			
17 18 19	HDMI1 IN HDMI2 IN HDMI3 IN	Standard HDMI Connector HDMI2.0 3840×2160 60Hz HDCP 2.3			
20	TYPE C1 IN	USB Type-C Connector USB3.2 Gen 1 (5Gbps, 5V, 3A) DisplayPort 1.2 ALT model / Touch / Power Delivery 15W			
21)	USB2.0 (for software update)	USB Type-A Connector USB 2.0 (480 Mbps, 5V, 500mA)			
22	TOUCH2 (for HDMI3/DisplayPort)	USB Type-B Connector USB2.0 (480 Mbps, 5V, 500mA)			
23	RS232C	DB-9 Connector			

24)	DisplayPort IN	Standard DisplayPort Connector DisplayPort1.2 3840×2160 30Hz HDCP 2.3			
25	LAN	RJ45 Gigabit Ethernet			
26	SPDIF OUTPUT	SPDIF Connector			
27)	Option WiFi/BT module slot (OWM002)				
28	AC IN	AC Connector(~: Alternating current) (AC-IN)			
29	AC SWITCH (ON) / (OFF)	Main Power Switch			
30	Speakers (Facing upward, 18W×2)				
31)	Handles	2x			

^{*} After connecting the laptop to the display via Touch cable or USB-C cable, you may see "Microphone (Built-in Audio)" listed in the devices.

FUNCTIONS OF THE REMOTE CONTROL



1	O	Turn the monitor ON and OFF.		
2	Number (1-9) / Other / Function (F1- F12)	Under iiWare: 0-9 numeric input Under Windows: 0-9 numeric input, Start/Space/ALT+Tab/ALT+F4/F1-12 for Keyboard function		
3	Display	Provide source and resolution information.		
4	Home	Android system main screen button.		
⑤	Input	Select the source.		
6	Green	Lock and unlock Buttons function.		
7	Red	Lock and unlock Buttons and Touch function.		
8	Screen Off	Turn the backlight On and Off.		
9	▲▼◆ ►	Navigate through submenus and settings. ▲: Up Button ▼: Down Button ◀: Left Button ▶: Right Button		
	Enter	Confirm your selection or save changes.		
10	<i>#</i>	Quickly start "Writing Software".		
1	PgUp / PgDn	When select File: The first / Last When Internet browser: Scroll Up / Scroll Down		
12		Not available on this model.		
13	₩	Turn on or off the mute function when the Menu is not displayed.		
14)	MENU	Display the "Screen Setting" menu when the Android system is not displayed.		
15)	Yellow	Lock and unlock Touch function.		
16	Blue	Freeze the picture.		
17)	×	Backspace		
18	Back	Return to a previous menu or closes the OSD Menu.		
19	VOL+ / VOL-	VOL+: Increase the sound volume. VOL-: Decrease the sound volume.		

PREPARING THE REMOTE CONTROL

To use the remote control, insert the two dry batteries.

CAUTION

- Do not use any other batteries other than those specified in this manual for the Remote Control.
- Do not insert old and new batteries together in the Remote Control.
- Make sure that the terminals match the "+" and "-" indications in the battery compartment.
- Remove the dead batteries immediately to prevent them from liquid leaking into the battery compartment.
- Burst batteries or the electrolyte from these batteries may cause stains, fire or injury.
- ① Open back cover of battery component on the back of remote control.



② Align and insert two AAA batteries according to their plus and minus ports (as indicated in the remote control).



3 After battery is installed, close the back cover of battery components, and make the following clip buckled to the bottom.





- Refer to the above instructions when taking out the batteries.
- Replace with new batteries when the Remote Control does not work close to the monitor.

 Use AAA dry batteries. Risk of explosion if battery is replaced by an incorrect type.
- Operate the Remote Control by pointing it toward the Remote Sensor on the monitor.
- Other manufacturers remote control will not work with this monitor. Use the provided Remote Control ONLY.
- Used batteries needed to follow the city rule to be discarded. (suggestion: to dispose of used batteries please follow correct policy as per your council regulations)
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- If you do not intend to use the remote control for a long period, remove the batteries.


BASIC OPERATION

■ Turning the monitor ON

The monitor is turned On and the Power Indicator turns to White when you press the Power Button on the monitor or the Remote Control. The monitor is turned Off and the Power Indicator turns to Red when you press the Power Button on the monitor or the Remote Control. Press again to turn On the monitor.

NOTE

Even when using the standby mode or turning OFF the Power Switch, the monitor will consume a small amount of electricity. Turn OFF the Power Switch or disconnect the Power Cable from the power supply whenever the monitor is not in use or during the night, to avoid unnecessary power consumption.

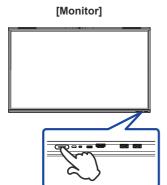





■ Display the adjustment menu page

The menu page appears on the screen when you press the Menu Button on the Remote Control.

The menu page disappears when you press the Back Button on the Remote Control.

[Remote Control]



■ Move the cursor vertically

Select adjustment by pressing the \blacktriangle / \blacktriangledown Button on the remote control while the menu page is displayed on the screen.

[Remote Control]



■ Move the cursor horizontally

Select menu or setting, or perform the adjustment by pressing the ◀ / ▶ Button on the remote control while the menu page is displayed on the screen.

[Remote Control]



■ Adjust the volume of sound

Press the VOL- / VOL+ Button on the remote control to adjust the volume of sound when the menu page is not displayed on the screen.

[Remote Control]



■ Switch the input signal

The Input setting menu appears on the screen when you press the Input Button on the remote control.

[Remote Control]




CONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off .
- ② Connect the computer to the monitor with the signal cable.
- 3 Connect the computer to the monitor with the Touch USB Cable.
- ④ Connect the computer to the monitor with the USB Type-C Cable when viewing images on your monitor through the USB Type-C Connector or when using the monitor's USB hub function.*
- (5) Connect the Power Cable to the monitor first and then to the power source.
- 6 Turn on your monitor (Main Power Switch and Power Button) and computer.
- * When charging connected device via USB Type-C Connector, check if the device is equipped with a USB Type-C Connector that supports charging function via USB PD (=Power Delivery).
 - The connected device can be charged via USB Type-C Connector even when the monitor is in standby mode.
 - The USB power delivery is up to 100W. If the connected device required more than 100W for operation or for boot up (when the battery is drained), use the original power adapter that came with the device.
 - If a separately purchased USB Type-C Cable is used, make sure the cable is certified by USB-IF and is full-featured with power delivery and video / audio / data transfer functions.
- USB C to A cable is not included with the monitor. If you use a USB C to A cable, please note that you can only transfer data.
- Compatibility with all connected devices is not guaranteed due to different user environments.

NOTE

- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- Make sure you tighten the finger screws at each end of the Signal Cable.
- The touch function is ready for use about 5 seconds after connecting the USB cable and can be operated with a pen, finger or any other pointer.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

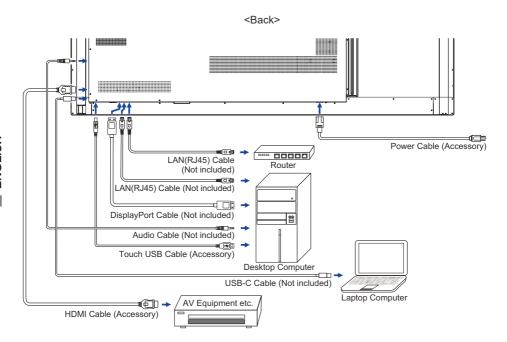


[Connection example with the peripheral device]

CAUTION

Turn off the power switch and unplug the monitor and peripherals before connection to avoid an electric shock or a damage.

NOTE

- Refer to the user manual of peripherals at the same time.
- Ensure you have the necessary cables as required.

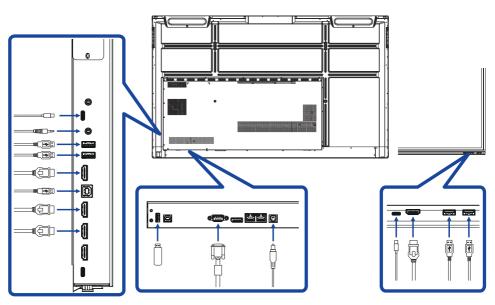

COMPUTER SETTING

- Signal Timing
 Change to the desired signal timing listed on page 60: COMPLIANT TIMING.
- Procedure for turning ON the Power Switch
 Turn ON the monitor first, and then the computer.
- MULTI-TOUCH:

This monitor complies with DDC2B of VESA standard. (Plug&play compliant)

The MULTI-TOUCH function runs on Windows7/8/8.1/10/11 by connecting the monitor to DDC2B compliant computer with the USB cable supplied.

■ TOUCH support operation system :

Microsoft Windows 2000 (64 bit and 32 bit)

Microsoft Windows XP (64 bit and 32 bit)

Microsoft Windows Vista (64 bit and 32 bit)

Microsoft Windows 7 (64 bit and 32 bit)

Microsoft Windows 8/8.1/10/11 (64 bit and 32 bit)

Mac OS X V13.1 & higher HID for single touch only

Linux 3.0 & higher need patch for multi-touch

3.5 & higher HID for multi-touch

Not support Windows earlier versions.

	Windows 7*5,8/8.1*6,10*6,7,8,11*6,7,8	Windows7*4	Vista	XP	2000	Mac OSX	Linux
Default mouse*1	0	0	0	0	0	0	0
Touch digitizer*2	0	0	0	×	×	×	×
Windows gestures*3	0	×	×	×	×	×	×

^{*1} Default mouse (click, drag, double-click and right-click)

^{*2} Touch digitizer (click, drag /selection, double-click, right-click, flick and visual feedback)

^{*3} Digitizer with Windows7/8/8.1/10 multi-touch gestures

^{*4} Windows 7 - Starter and Home Basic version

^{*5} Windows 7 - Home Premium, Professional, Enterprise and Ultimate versions

^{*6} Windows 8/8.1/10/11 need non-OEM version for multi-touch support


^{*7} Windows10/11 - Home, Pro, Enterprise, Education, IoT Core Not supported for Mobile and Mobile Enterprise.

^{*8} Windows10/11 - Touch do no support for "touchpad gestures". Touchpad gesture is for touchpad on notebook.

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 60. You are also able to adjust the picture by following the button operation shown below.

① Take middle point position on the buttom of display screen as starting point, use the touch pen to drag towards screen center position to call up source menu as shown below. You can also access the Menu by clicking on the navigation toolbar or press Input Button on the remote control.

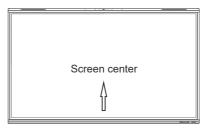

② Start the On Screen Display feature. There are additional Menu items which can be switched by using the ▲ / ▼ Buttons on the remote control or with the touch pen.



- ③ Select the Menu item of the adjustment you want to make. Press the ▶ button. Then, use the ▲ / ▼ Buttons on the remote control or with the touch pen to highlight the desired adjustment item. Then, press the Enter button on the remote control.
- ④ Use the ◀ / ▶ Buttons on the remote control or with the touch pen to make the appropriate adjustment or setting.
- ⑤ Press the Back Button on the remote control or click blank area outside menu with the touch pen to exit menu.

For example, to correct for brightness, select Menu item of "Display". Select "Brightness" by using the \blacktriangle / \blacktriangledown Buttons on the remote control or with the touch pen.

Use the ◀ / ▶ Buttons on the remote control or with the touch pen to change the brightness settings. The brightness of the overall display should be changing accordingly while you are doing this.



Press the Back Button on the remote control or click blank area outside menu with the touch pen, it ends, all changes are saved in the memory.

OPERATING THE MONITOR 23

NOTE

- The Back Button on the remote control can be used to return previous menu item.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- Adjustments for Image Position and Phase are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.

Direct * Available for Remote Control only.

• Freeze Function:

Press the Blue button when Menu is not displayed. Repeat successively to activate/deactivate the function.

Backlight Function:

Press the Screen Off button when Menu is not displayed. Repeat successively to On/Off the function.

• Input Function:

Press the Input Button when Menu is not displayed.

Volume Function:

Press the VOL+/VOL- Buttons when Menu is not displayed.

• Mute Function:

Press the Button when Menu is not displayed. Repeat successively to On/Off the function.

• Kiosk Mode Function:

Disable touch functions, buttons, Menu etc.
Turn off "iiWare Enable" in Debug menu (Input + 2580)

[LOCK MODE] * Available for Remote Control only.

• Front Power Button:

Press the Green Button when Menu is not displayed, will lock/unlock the Front Power Button.

• Touch function:

Press the Yellow Button when Menu is not displayed, will lock/unlock the Touch function.

Front Power Button & Touch function:

■ Press the Red Button when Menu is not displayed, will lock/unlock the Front Power Button and Touch function

ADJUSTMENT MENU CONTENTS

General settings



Adjustment Item		Problen	n / Option	Button to Press
		PC *2	Select the PC input.	
		iiWare	Select the iiWare input.	
		HDMI1	Select the HDMI1 input.	
		HDMI2	Select the HDMI2 input.	
Input *1	Direct	HDMI3	Select the HDMI3 input.	
		HDMI4	Select the HDMI4 input.	
		DP	Select the DisplayPort input.	
		Type-C1	Select the Type-C1 input.	
		Type-C2	Select the Type-C2 input.	
		Too soft		* >
Volume	Direct	Too loud		* * *
Backlight	Direct	Brightness of backlight is reduced.		

^{*1} The switching of the signal input take a few seconds.

^{*2} Available when Slot-PC is installed only.

Display settings



Adjustment Item	Probler	n / Option	Button to Press
Auto brightness	0	The image brightness can be a according to the ambient light.	utomatically adjusted
	1	Auto brightness is turned off.	
ECO	0	Brightness of back-light is redu	ced.
E00	1	ECO is turned off.	
Eye care	0	Blue light is reduced.	
Lye care	1	Eye care is turned off.	
Paper eye care	0	The screen simulates a paper-l eye strain with a grainy effect.	ike texture, reducing
		Paper eye care is turned off.	
	Standard	For general windows environme setting.	ent and monitor default
Picture mode *1	Bright	Enlarge brightness and vivid.	
1 lotare mode	Soft	Reduce brightness and soften.	
	Custom	Displays a picture on a screen adjustments.	set by Image Settings
Brightness *2,3	Too dark Too bright		+ +
Contrast *3	Too dull Too intense		* * * * * * * * * * * * * * * * * * *
Saturation *3	Too weak Too strong		*
Sharpness *3	Too soft Too sharp		*
Color Temperature	Too cool Too warm		♣

Display settings



Adjustment Item	Problem / Option				
	HDMI range	DMI range Select the range of the HDMI. Auto / 16~235 / 0~255			
	Pixel Shift	0	The screen image will move around slightly every 2 minutes.		
		1	Pixel Shift is turned off.		
Advanced settings	ttings AI PQ		Enhances and improves the monitor's image quality by using AI, resulting in crisper, more lifelike visuals.		
		1	Al PQ is turned off.		
	Dynamic contrast		Dynamic Contrast Ratio		
	(DCR)		DCR is turned off.		

^{*1} Picture mode is disabled when iiWare input.

^{*2} Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

^{*3} Adjustable when "Custom" of Picture Mode is activated.

Audio settings



Adjustment Item	Problem / C	Option	Button to Press		
	Standard	Standard			
Audio Mode	Meeting	Meeting Sound quality suitable for the conference.			
Addio Mode	Class	Sound quality suitable for the	ne classroom.		
	Custom	Custom sound quality.			
Volume Direct	Too soft Too loud				
Bass	Too weak Too strong				
Treble	Too weak Too strong				
Balance	Left side speaker louder Right side speaker louder				
Mute Direct	0	Return the sound volume to	the previous level.		
Mute Direct	1	Turn off the sound.			

[Debug Menu] * Available for Remote Control only. Input + 2580

• Initial Touch Panel

The default settings will be restored.

Unknown sources: On / Off

Enables / disables Unknown sources.

• iiWare Enable: On / Off

Enables / disables Kiosk mode.

• HDMI OUT Enable: On / Off

Enables / disables HDMI OUT function.

• HDMI IN OUT Enable: On / Off

Enables / disables "HDMI OUT Enable" when input source is HDMI.

Exit

[Application]

■ Settings

Click on the display screen, on the navigation toolbar or pull down the screen menu with the touch pen. Then, click with the touch pen.







XXXXXX :

When connecting a LAN or Option WiFi module, the password for a notebook or a smartphone, etc. to connect to iiyama Share, is displayed on the screen. (Automatically generated)

: Click to display the All Apps.

: Click to display the iiyama Account.

[i Settings]

Adjustment Item		Problem / Option			
		Wi-Fi *1,2	Set the WiFi function On / Off and pairing to WiFi device.		
		Network preferences	Turn on Wi-Fi automatically / Notify for public networks / Install certificates / Wi-Fi Direct		
	Internet	Saved networks	Save wifi networks on this monitor.		
		Non-carrier data usage	The data consumption on the monitor that does not occur through the carrier's network.		
Network &	Ethernet		n network. n / Off, Local network setting, IP address, Default transk, DNS, Proxy, MAC address		
internet	Airplane mode	Disables all	wireless communications on the monitor.		
	Hotspot & tethering	Wi-Fi hotspot *1,2	Set the Hotspot and tethering function. Use Wi-Fi hotspot: On/Off, Hotspot Name, Security, Hotspot password, Extend compatibility: On/Off		
	Data Saver	Reduces da Use Data Sa	ta consumption on the monitor. aver : On / Off, Unrestricted data		
	VPN	Set the VPN			
	Private DNS	Select Private DNS Mode. Off / Automatic / Private DNS provider hostname			
Connected		ole devices or select from saved pairings. / Saved devices			
devices	Connection preferences	Set preferences for various connectivity options. Bluetooth / NFC / Cast / Android Beam / Printing / Nearby Share			
Apps	Application ma Default apps, S		Jnused apps, Special app access		
	App settings	Disable / En	able the notifications from each app.		
	Notification history	Display rece	ent notifications and snoozed notifications.		
	Conversations	Display the	conversations labeled with priority or modified.		
	Bubbles	Display the c	conversations as floating icons on top of other apps.		
	Device & app notifications	Control whic	h apps and devices can read notifications.		
	Notifications on lock screen		cations displayed on the locked screen of the		
Notifications	Sensitive notifications	Show sensit	ive content when locked.		
		Disable / En	nable the interruption function.		
		People			
	Do not disturb A	Apps	Set people, apps, alarm and other interruptions		
		Alarms & other interruptions	causing disturbance not to display notifications.		
		Schedules	Disable / Enable interruption function during sleeping mode and events.		

[🔯 Settings]

Adjustment Item	Problem / 0	Option		Button to Press		
		Duration for Quick Settings	to rem	e duration for the "Do Not Disturb" mode ain active. you turn off / For 1 hour / Ask every time)		
	Do not disturb	Display options for hidden notifications	options notifications. (No sound from notifications / No vis			
		Disable / En	Disable / Enable to receive critical emergency alerts.			
		Extreme threats		ve the emergency alerts for extreme		
		Severe threats	threats	s and severe threats.		
	Wireless emergency	AMBER alerts	Receiv childre	ve the emergency alerts for missing n.		
Notifications	alerts	Test alerts		ve carrier tests and monthly tests from the lert system.		
		Emergency alert history		y a log or record of previously received ency alerts.		
		Alert reminder		e reminders for emergency alerts. / Every 2 minutes / Every 15 minutes / Never)		
	Hide silent notifications in ststus bar	Disable/Enable to hide notifications marked as "silent" from appearing in the status bar.				
	Allow notification snoozing	Disable / Enable the temporary dismissal of notifications for a specific period, after which they will reappear.				
	Notification dot on app icon	Disable / Enable the addition of a small dot to the app icons on your home screen, indicating unread notifications for those apps.				
	Enhanced notification	Disable / Enable to receive suggested actions, replies, and more.				
Storage	Display and ad Storage manag			ge.		
	Media volume					
	Call volume	Too soft		6		
	Alarm volume	Too loud		4		
	Notification volume					
	Do not Disturb	(Please refe "Notification:	r to the s" optio	"Do not Disturb" setting in the ns.)		
Sound	Live Caption		anguag	your device and automatically generates es, Hide profanity, Show sound labels, me control		
	Media	Pin media player	playba	e / Enable for quick resumption of ick, as the media player remains sible in the Quick Settings menu.		
		Show media recommenda		Disable / Enable the display of media content recommendations based on your usage patterns and preferences.		

[🔯 Settings]

Adjustment Item	Problem / Option			
	Default notification sound	Select the sound that will play for notifications by default.		
	Default alarm sound	Select the sound that will play for alarm by default.		
	Screen locking sound	Disable / Enable the sound that plays when the screen is locked.		
	Touch sounds	Disable / Enable the sounds that play when you touch the screen.		
Sound		Audio output channel	Set the Audio output channel. Speaker / Line out / Mixed	
		Mic	Set the microphone input. AUTO / OFF / USB-Audio-Touch Device	
	Audio output channel	Input source naming	Input Alias Switch : On / Off Change the Input name to Nickname.	
		HDMI OUT format	3840 × 2160_60Hz / 1080P_60Hz / 480P_60Hz / AUTO	
		TypeC OUT format	3840 × 2160_60Hz / 1080P_60Hz / 480P_60Hz / AUTO	
	Lock screen	Set the information or features displayed on the lock screen. Privacy, Addusers from lock screen, Add text on lock screen, Show wallet, Show device controls, Control from locked device, Double-line clock		
	Screen timeout	Set the Screen timeout duration. (15 seconds / 30 seconds / 1 minute / 2 minute / 5 minute 10 minute / 30 minute / Never)		
	Dark theme	Use Dark theme	Disable / Enable the dark theme mode for the display interface.	
		Schedule	Set when the dark theme mode is activated. (None / Turns on at custom time / Turns on from sunset to sunrise)	
		Set the font and display size.		
Display		Bold text	Disable / Enable bold text.	
	Display size and text	High contrast text	Disable / Enable high contrast text.	
		Reset settings	Display size and text settings will be restored to factory-preset data.	
	Screen saver		ble Screen saver. s / Landscape / Photos	
	Screen saver	Screen saver	Set the Screen Saver duration. (Never / 15 min / 30 min / 60 min / 90min)	
	Eye protection mode	Disable / Ena	ble Eye Protection Mode.	
	Auto backlight	The brightnes	s of the backlight decreases automatically.	
	Pixel shift		al of Pixel Shift function. 3 mins / 5 mins / 30 mins / 60 mins)	
Wallpaper	Set the Wallpaper.			

[🕸 Settings]

Adjustment Item	Problem / Option		
Wallpaper	Dark theme	Dark theme Disable / Enable the dark theme mode for the display	
vvalipapei	Themed icons	Disable / Enabl	e the use of themed icons.
	Accessibility	Accessibility Menu shortcut	Disable/Enable the "Accessibility Menu shortcut".
	Menu	Settings	Large buttons : Disable/Enable to increae the size of the icons in the Accessibility menu.
	OCR-INPUT	Use OCR- INPUT	Disable / Enable OCR input.
	OCIV-IIVI OT	OCR-INPUT shortcut	Disable / Enable the "OCR-INPUT shortcut".
	Select to	Select to Speak shortcut	Disable / Enable the "Select to Speak shortcut".
	speak	Settings	Text to speech settings, Disable / Enable (Read in background / Read text on images)
		Use TalkBack	Disable / Enable TalkBack.
	TalkBack	TalkBack shortcut	Disable / Enable the "TalkBack shortcut".
		Settings	Adjust TalkBack settings.
	Display size and text	(Please refer to the "Display size and text" setting in the "Display" options.)	
	Color and motion	Color inversion	Disable / Enable (Color inversion / Color inversion shortcut.
Accessibility		Dark theme	(Please refer to the "Dark theme" setting in the "Display" options.)
		Color correction	Disable / Enable Color correction. Red-green / Red-green / Blue-yellow / Grayscale Disable / Enable the "Color correction shortcut".
		Remove animations	Reduce movement on the screen.
		Large mouse pointer	Make the mouse pointer more noticeable.
		Magnification shortcut	Disable / Enable the "Magnification shortcut".
	Magnification	Magnification type	Select how to magnify. Magnify full screen / Magnify part of screen / Switch between full and partial screen
		Magnify typing	Magnifier follows text as you type.
	Timing	Touch & hold delay	Sets the duration required for a tap on the screen to be recognized as a touch & hold action. (Short / Medium / Long)
	controls	Time to take action (Accessibility timeout)	Select the duration for displaying temporary messages prompting you to take action. (Default / 10 seconds / 30 seconds / 1 minute / 2 minutes)

[🔯 Settings]

Adjustment Item			Problem / Option	
	Timing controls	Autoclick (dwell timing)	Set the cursor to take action automatically when the cursor remains stationary for a specified duration. (Autoclick off / short / Medium / Long / Custom)	
	System controls	System navigation	Set how you navigate the system. (Gesture navigation / 3-button navigation / Traditional navigation)	
	Live Continu	Use Live Caption	Disable / Enable Live Caption.	
	Live Caption	Settings	Languages, Disable / Enable (Hide profanity / Show sound labels / Live Caption in volume control)	
		Show caption	Disable / Enable Caption.	
	Caption preferences	Caption size and style	Set captions size and style.	
		More options	Set captions language.	
	Audio description	Disable / Enal	ole Audio description.	
	Audio	Mono audio	Disable / Enable Mono audio.	
	adjustment	Audio balance	Adjust the balance between left and right audio channels on sound devices.	
	Accessibility shortcuts	Accessibility button	Quickly access accessibility features. Location / Size / Fade when not in use / Transparency when not in use	
Accessibility		Shortcut from lock screen	Disable / Enable shortcut to access features from the lock screen.	
	Text-to- speech output	Set the preferred engine, language, speech rate and pitch.		
	Startup & shutdown	Startup source	Last shutdown channel / PC*3 / iiWare / HDMI1 / HDMI2 / HDMI3 / HDMI4 / DP / Type-C1 / Type-C2	
		Standby	Turn off the backlight.	
		(Black screen) after startup	NOTE Press the Screen Off button on the remote control or touch the screen to return to the screen.	
		Auto standby	Enable the Auto standby function. (Never / 15 mins / 30 mins / 60 mins / 90mins / 120 mins)	
			Enable the Auto shutdown function. (Never / 30 mins / 60 mins / 90mins / 120 mins / 240 mins)	
		Auto shutdown	NOTE The Auto shutdown function is enabled as default setting. The monitor turns off automatically 4 hours after the key or touch operation stops. Disable Auto shutdown function when you use the monitor continuously for more than 4 hours.	
		No Signal Power Off	Enable the No signal power off function. (Off / 1 min / 3 mins / 5mins / 10 mins / 15 mins / 30 mins / 45 mins / 60 mins)	

[🕸 Settings]

Adjustment Item	Problem / Option		
Accessibility	Startup & shutdown	Startup / shutdown task Ask before shutting down	Select the time of each, and select day of the week or everyday or the business days. Disable/Enable prompt for confirmation before initiating a shutdown.
	Google Play Protect	Scans all apps for harmful software, ensuring the security of your device.	
	Find My Device	Use the web to	locate, ring, or remotely wipe your device.
Security	Security update	Android security update	
	Screen lock	Choose the me	ethod to unlock your screen.
	More Security settings	Smart Lock, De Trust agents, A	evice admin apps, Encryption & credentials, pp pinning
	Privacy dashboard	Review privacy	settings and manage privacy preferences.
	Permission manager	Set app permis	sions.
	Show passwords	Disable / Enabl	le display password feature.
	Notifications on lock sscreen	Select how not	ifications are displayed on lock screen.
	Android System Intelligence		roid System Intelligence. g, Keyboard, Clear data
Privacy	App content	Disable / Enabl	e apps to send content to the Android system.
	Show clipboard access		le showing a message when apps access r other content you have copied.
	Autofill service from Google	Disable / Enable Autofill service.	
	Activity controls	Choose the activities and info you allow Google to save	
	Ads	Manage ads pe Reset advertisi Google	ersonalization. ng ID, Opt out of Ads Personalization, Ads by
	Usage & diagnostics	Disable / Enabl	le Usage & diagnostics.
	Use location	Disable / Enabl	le location services.
	App location permissions	Set App locatio	n permissions.
Location	Location services		erts, Emergency Location Service, Google ng, Wi-Fi scanning, Bluetooth scanning
	Country & region	Set country and	
Safty &	Medical information		edical information for preventing emergencies. /pe, Allergies, Medications, Address, Medical onor
emergency	Emergency contacts	Specify contact	ts to be contacted in an emergency.

[i Settings]

Adjustment Item	Problem / Option			
	Emergency SOS	Set up Emergen call or signal for	cy SOS to quickly initiate an emergency help.	
	Crisis alerts	Disable / Enable	receiving notifications about critical situations.	
Safty & emergency	Emergency Location Service	Disable / Enable location from the	the emergency services to access e device.	
	Earthquake alerts		receiving notifications about earthquakes.	
	Wireless emergency alerts	(Please refer to the "Notifications	the "Wireless emergency alerts" setting in s" options.)	
Passwords &	Set accounts and	passwords.		
accounts	Automatically sync app data	Disable / Enable	automatic synchronization of app data.	
	Display a daily sur	mmary of your de	vice usage and app activity frequency.	
	Dashboard			
	Bedtime mode	Customize the s	ettings of Bedtime mode and Focus mode.	
	Focus mode			
Digital Wellbeing & parental	Manage notifications			
controls	Do not Disturb	Customize notifications and control interruptions.		
	Heads Up			
	Show icon in the app list			
	Parental controls	Add content restrictions and set other limits to help your child balance their screen time.		
Google	Access settings related to Google services. Ads, Autofill, Backup, Devices & sharing, Find My Device, Parental controls, Personalize using shared data, Set up & restore, Settings for Google apps		aring, Find My Device, Parental controls,	
	Date format	Select the Date format.		
	Country & region	The region setting ensures that your router will only let you use the wifi channels valid in your location.		
	Input & output	(Please refer to the "Audio output channel" setting in the "Sound" options.)		
	OS update	Check and upda	te to latest Windows OS.	
Advanced	Show Android status bar	Disable / Enable	Android status bar.	
	Pen type	Select the type of stylus.		
	Startup & shutdown	(Please refer to the "Startup & shutdown" setting in the "Accessibility" options.)		
	Display	(Please refer to the setting in the "Display" options.)		
		Set the Multi-Window mode On/Off.		
	Multi-Windows mode	Window control bar *4	Set the position of the window control bar. (On top / Left side / Right side)	
		Show multi- window tips *4	Disable / Enable Multi-window Tips.	

[🕸 Settings]

Adjustment Item		Problem / Option		
	Gesture	Five fingers control	Customize the settings to enable the touch gestures function. (Slide left / Slide right / Slide up / Slide down / Slide shrink / Slide spread)	
Advanced		Camera gesture control	Customize the settings to enable the Camera gestures function.	
	Email	Set the Email. Email Settings, I	Logout Email Account	
	Enable Administrator	Grant or revoke or services on the	administrative privileges for specific apps ne device.	
	Change administrator password	Reset administra	ator password.	
	Wake On Lan	Set the Wake Or	n Lan function On/Off.	
	HDMI CEC	Set the HDMI CI	EC function On/Off.	
	Wake On Active Source	Set the Wake O	n Active Source function On/Off.	
	LICD clans	Import	Import from signage folder under USB/SD. USB storage / SD card	
Administrator	USB clone	Export	Export to signage folder under USB/SD. USB storage / SD card	
	Default startup item	Camera / Chrom / Finder / Gmail iiyama DMS / iiy / Meet / Note / P	em 'URL / Browser / Calculator / Calendar / ne / Clock / Cloud Drive / Contacts / Drive / Google / Google TV / iiyama account / ama Share / Keep Notes / Keeper / Map alette / Photos / PIP / Play store / Safty / izer / YouTube / YT Music)	
	Auto remove files	Storage period (None / 1day / 7days / 30days) Type of removed file (Video / Audio / Images / Documents / Other files)		
	Security lock	Disable / Enable (Settings Lock / Network Lock / USB / Unknown Source*5)		
		Languages	Set display language, keyboard and input	
		App Languages	method. Language: Català / Čeština / Dansk /	
		On-screen keyboard	Deutsch / Eesti / English / Español / Français / Italiano / Latviešu / Lietuvių/	
Overhann	Languages &	Physical keyboard	Magyar / Nederlands / Norsk Bokmål / Polski / Suomi / Svenska / Русский / Українська	
System	input	Voice input	Set Voice input.	
		Text-to- speech output	Set the preferred engine, language, speech rate and pitch.	
		Spell checker	Disable / Enable Spell checker. Languages, Default spell checker	
		Personal dictionary	For all languages, Chinese (China), English (United States), Japanese	

[the Settings]

Adjustment Item	Problem / Opti	on	Button to Press	
	Languages & input	Pointer speed	Too slow Too fast	
		System navigation	Set how you navigate the system. (Gesture navigation / 3-button navigation / Traditional navigation)	
	Gestures	Press and hold power button	Disable / Enable the feature to activate the assistant.	
		Five fingers control	(Please refer to the "Gesture" setting in	
System		Camera gesture control	the "Advanced" options.)	
	Date & time	Set the Date and Time. Date, Time, Use location to set time zone, Time zone, Use locale default, Use 24-hour format, Date Format		
	Backup	Back up the data with Google one.		
	System update	Check and update to latest FirmWare version.		
	Multiple users	Manage multiple users and guest.		
	Reset options	Reset Wi-Fi, mobile & Bluetooth, Reset app preferences, Erase all data (factory reset)		
	OS update	(Please do the OS update in the Advanced settings.)		
About	Version / iiWare V address / Bluetoo Automatically sea	pout: Legal Information / Model / Serial number / Android re Version / IP address / Wi-Fi MAC adress / Device Wi-Fi Ma tooth address / Up time / Build number search update .zip from USB or SD card. When you select the le, the monitor will restart and the update will start.		

^{*1} WiFi, Hotspot and Bluetooth can only be used when Option WiFi Module or Slot-PC is installed.

^{*2} WiFi will be turned off when the Ethernet is turned on.

^{*3} Available only when Option Slot-PC is installed.

^{*4} Only available for Multi-Window Mode enable. See page 42 for more details.

^{*5} APK from unknown sources can be installed, the installation is done on customer own risk, manufacture will not take any responsibility and not give any support for the installed APK's. Input + 2580 (Debug Menu: Unknown sources)

■ Navigation toolbar appears

The navigation toolbar can be displayed on either left side or right side of the screen.

: Back : Home

: Back Stage

Clean all: Remove all in-progress apps

- Application -

🖼 : All Apps (Browser, Calculator, Calendar, Camera, Chrome, Clock, Cloud Drive, Contacts, Drive, Finder, Gmail, Google, Google TV, iiyama Account, iiyama DMS, iiyama Share, Keep Notes, Keeper, Maps, Meet, Note, Palette, Photos, PIP, Play Store, Safety, Settings, Visualizer, YouTube, YT Music)

- Tools -

You can customize up to 4 tools from "More" to the navigation bar.

(Click Edit in the "More" window or press and hold the icon. And add/remove to from the navigation bar by clicking the "+" / "-" displayed on the icon.)

: Mark

Pen: Annotate Brush: Marker

Clean: Clean the annotations, Gesture eraser

Save: Save current annotations in the screen content to picture in the storage.

Finder: Short cut to the folder of Finder.

Insert: Insert the picture (complete screen image) to Note.

Share: Share Annotation

Users can scan the QR code with a smartphone and download the annotation image to a smartphone.

Cloud: Google Drive / One Drive

Save to Cloud Drive

Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud Drive, users can select two options in the cloud storage overview.

Use the default account

When checked, all notes will be saved automatically to the default Cloud Drive. Users will not be able to select a cloud drive

Use the default file name when save

When checked, all notes will be saved to the selected Cloud Drive with the default file name. Users will not be able to (re) name the file

Close: Exit

🖪 : Menu

: More (All tools)

: Timer (CountDown)

: Freeze (Freeze the picture) Zoom +

> 700m -Full-screen Close: Exit



: StopWatch

📅 : SpotLight

Setting: Zoom / Clarity

Exit

📑 : Screen Lock (Lock/unlock the screen)

Lock / unlock is possible by setting "Lock Screen Password" in Settings.

: Crop (Screen Capture)

Freedom size

Full size

Window size

Save: Save in internal storage

Insert: Edit the captured image in Note, send to Note

Fxit

🕠 : AirClass(WiFi Teamwork)

(Available when the optional WiFI Module OWM002/SI07 is installed or with a working LAN connection. Participants need to be on the same network.)

Voter / Responder / Selector / Message / Manager / Exit

: Record Screen Recording

: PC (Select the PC input)

: Calculator

: PIP (Display the sub screen in the main screen)

🛅 : Display center

Duplicate: Make the content of the primary monitor to be duplicated on multiple displays simultaneously

Extend: The desktop to be extended across multiple displays

(See page 44 for more details)

III : iiyama Share

iiyama Share is a multi-screen interaction software for smartphone to interactive intelligent panel. (The device such as a computer or smartphone on the same network.)

Mirroring: It is an application that displays the screen of a device such as a computer or smartphone on the monitor.

Desktop Sync: It is an application that can control the screen of Monitor by displaying it on a device such as a computer or Smartphone.

Remote: It is an application that allows to remotely control the monitor on a smartphone. The Smartphone works as a Mouse/Touchpad for the screen.

Airplay/Chromecast: The device without installed iiyama Share app can still connect to iiyama Share via Airplay/Chromecast. (Compatibility is not guaranteed)

Miracast: The device without installed iiyama Share app can still connect to iiyama Share via miracast. (Compatibility is not quaranteed)

: Adjust the Brightness.

a : Adjust the Volume.

■ Shortcut*

- App -

Drag and drop the App icon from "All apps" to create a shortcut icon on the screen.

- File / Folder -

Drag and drop a File or Folder from the Finder to create a shortcut icon on the screen.

- Website -

Create a shortcut by opening the desired website and clicking "Send the quick-link to Desktop" in the settings menu.

- Move -

Move by long-pressing the icon and dragging and dropping.

- Remove -

Remove it by long-pressing the icon and clicking Remove from the menu.

* Available after login in iiyama account.

■ Multi-Windows

To use the Multi-Windows feature, first turn on Settings > Advanced > Multi-Windows Mode.

- Resize Windows to display 4 apps on the screen at the same time.
- Drag content between apps.

Press and hold the image on the browser and drag the image to NOTE.

<Support>

Image : NOTE, Finder Text : NOTE, Finder

<How to use AirClass>

- 1) The teacher click the . AirClass.
- ② Use the device to scan the QR code. (device: Android and mobile device on the same network) The students can also join the class by entering the URL in browser.
- ③ After all students have joined the class, click "ENTER THE CLASS".



4 Answer

- 1. The teacher write a question on the note and click the Voter.
- The teacher select Single Choice Mode or Multiple Choice Mode.
- The number of students who are logged in is displayed. Then click BEGIN.
- 4. After the student submitted the answer, the teacher can click "Finish", and the answer's statistics data will be shown on the screen.
- Teacher selects the correct answer on the screen; the correct answer will be green coloured, and the wrong answer will be red coloured.



⑤ Respoder

After teacher clicks the Responser. The 1st student who clicks the "Be Fast"icon the Notebook/Smartphone will be selected.

6 Selector

The teacher can click on the Selector to randomly select one student to answer the questions.

(7) Message

- 1. The teacher can enable the Message function to allow students' messages be presented on the screen.
- The students write their own opinions on their Notebook or Smartphone and click to Send.



8 Manager

The teacher can click the Manager to display the QR code to let other students to enter the class at any time.

<How to use Display center>

- ① Click the Tolsplay certer.
 - This function is to identify the connection to exernal monitor with HDMI OUT or Type C OUT.
- 2 Pop-up window.



3 Display settings


Manager:

Choose your desired modes for multi-monitor displays: Duplicate or Extend.

Lavout

Press and hold (or click) the display, then drag to rearrange the position.



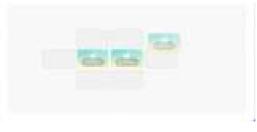

(4) Extend Mode

App toggle:

Select a background app and move to a monitor to use the app on that monitor.



[Note]

This is a writing software.

Can write the characters, Lines and pictures like a whiteboard. Also, can insert an image or file.

Click with the touch pen.

- Tools -

Menu: Display menu of Note.

New: Save the Note writing and open a new Note.

Open: Open the file.

Save: Save the current document to image format to file browser.

Save as: Save the current document to a new location with the same name or a different title.

Import: Import the picture. (IMG/PDF/SVG) Export: Export as IMG/PDF/SVG/IWB. Cloud Storage: Google Drive / One Drive

Save to Cloud Drive

Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud Drive, users can select two options in the cloud storage overview.

Use the default account

When checked, all notes will be saved automatically to the default Cloud Drive. Users will not be able to select a cloud drive.

Use the default file name when save

When checked, all notes will be saved to the selected Cloud Drive with the default file name. Users will not be able to (re)name the file.

Theme: Change the color of the background. Send Email: Send the captured image by Email.

Settinas:

Eraser mode: Eraser / Erase selection Palm rejection disabled/enabled:

Enabled: When enabled, ignores the palm resting on the screen.

Multi-finger writing disabled/enabled:

Multi-finger is allowed when turned on, and multi-finger is preview when turned off.

Automatic brightness disabled/enabled:

Enabled: Reducing the brightness automatically when writhing the Note.

Customise toolbars: You can customize the toolbar by choosing tool from "Customize toolbar"

Exit: Return to main screen.

Share: Share Note

Users can scan the QR code with a smartphone and download the annotation image to a smartphone.

List: List up all the opened Notes.

Select: Select the object being edit, can move, can zoom.

Pen: Customize the color of your pen while handwriting.

Change the width and color of the stroke. (Pen/Handwriting size/Handwriting color)

Eraser: Erase the specified object. Clean All: Erase the all object.

Ruler: Ruler function



Shape: Draw the shape. Table: Table creation

Mind map: Visual thinking tool Sticky-Notes: Brainstorming tool

Preview: Display image Grid: Grid notes tool Undo: Cancel

Redo: Redo

Add: Add new page after the last page.

: To the previous page.
: To the next page.
: Page number

- Extension function of the pen -

After selecting the handwriting, the handwriting can be turn to intelligent text and for further processing.

Tools: Color, Smartwrite, Search, Flip, Top, Clone, Delete

- Image expansion function -

After selecting the image, the image can be transformed into vector image, and the image can be mirrored.

Tools: Crop, SVG, Flip, Top, Clone, Delete

[Finder (File Browser)]

Click with the touch pen.



Browse the files stored in the internal storage device, the USB storage, Public Cloud, Remote File and your Cloud storage.

Supported Format

DOC: PPT, Word, Excel, PDF (Open the file by using the WPS Office)

Note: Note files, screenshot

Movie: .3g2 .3gp .avi .flv .f4v .mkv .mov .mp4 .VOB .mpg/.MPEG .ts

Picture: .jpg .jpeg .png .bmp .gif

Music: .aac .ape .flac .m4a .mp3 .ogg .wav

- Tools -

: Search

- : Minimization

: Maximization / restoration

: Exit

: Grid

=: List

: Sort (Sorts Name, Time, Size, Type.)

: Select

: Select All

: Cancel

: Create

: New Win

: Copy

: Paste

: Cut

: Delete

Rename

: Send

My Files

"My files" folder will be created in your OneDrive or Google Drive once connected to your iiyama account.

Public Cloud (Google Drive / One Drive)

Save to Cloud Drive

Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud Drive, users can select two options in the cloud storage overview.

Use the default account

When checked, all notes will be saved automatically to the default Cloud Drive. Users will not be able to select a cloud drive.

Use the default file name when save

When checked, all notes will be saved to the selected Cloud Drive with the default file name. Users will not be able to (re)name the file.

Remote File

Support access to SAMBA(SMB1.0) and FTP server.



[Browser (Web Browser)]

Connect the network, and browse the web.

Click • with the touch pen.

[Camera]

Take photos and record videos.

Click in with the touch pen.

[Clock]

Set alarms, check the time, and use a stopwatch and timer.

Click with the touch pen.

[Cloud Drive]

Connect the network, and the Cloud Drive.

Click with the touch pen.

[Contacts]

Manage phone numbers, emails, and addresses.

Click with the touch pen.

[iiyama Account]

This is a single sign-on authentication scheme for customer identity and access management.

Click # with the touch pen.

[iiyama DMS]

This software provides organizations with a convenient and fast unified management solution for terminal equipment, builds an efficient and real-time equipment management system, helps digitize the campus environment and makes campus management more convenient.

Click with the touch pen.

[iiyama Share]

This is the software that can wirelessly share the screen with other notebook etc..

Click with the touch pen.

[Keeper]

This is the software to clean up the running application.

Double click with the touch pen.

One Key Optimize: Memory and Garbage clean

Memory Clean : Clean memory Garbage Clean : Clean storage

[Palette]

This is an illustration writing software.

Click with the touch pen.

[Visualizer]


Visualizer is an app that allows users to connect webcam or visualizer(document camera) for capturing live instructions or physical materials and then projecting them onto a display for viewing and annotating.

Click on with the touch pen.

STANDBY FEATURE

■ Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to red. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

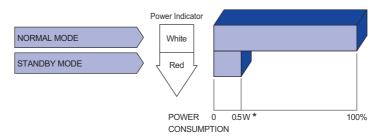

^{*} When the USB devices are not connected.

TROUBLE SHOOTING

Problem

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- 3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or ijyama service center for further assistance.

Check

1	The picture does not appear.	
	(Power indicator does not light up.)	 □ The Power Cable is firmly seated in the socket. □ The Power Switch is turned ON. □ The AC socket is live. Please check with another piece of equipment.
	(Power indicator is white.)	 ☐ If the blank screen saver is in active mode, touch the keyboard or the mouse. ☐ Increase the Contrast and/or Brightness. ☐ The computer is ON. ☐ The Signal Cable is properly connected. ☐ The signal timing of the computer is within the specification of the display.
	(Power indicator is red.)	☐ If the monitor show "No Signal", touch the keyboard or the mouse. ☐ The computer is ON. ☐ The Signal Cable is properly connected. ☐ The signal timing of the computer is within the specification of the display.
2	The screen is not synchronized.	☐ The Signal Cable is properly connected. ☐ The signal timing of the computer is within the specification of the monitor.
3	The screen position is not in the center.	☐ The signal timing of the computer is within the specification of the monitor.
4	The screen is too bright or too dark.	☐ The video output level of the computer is within the specification of the monitor.
5	The screen is shaking.	☐ The power voltage is within the specification of the monitor. ☐ The signal timing of the computer is within the specification of the monitor.
6	No sound.	 □ The audio equipment (computer etc.) is ON. □ The Audio Cable is properly connected. □ The Volume is turned up. □ The Mute is OFF. □ The audio output level of the audio equipment is within the specification of the monitor.
7	The sound is too loud or too quiet.	☐ The audio output level of the audio equipment is within the specification of the monitor.
8	A strange noise is heard.	☐ The Audio Cable is properly connected.

	Problem	Check
9	The touch screen shows no response.	☐ The USB Cable is firmly seated in the socket. ☐ Touch screen driver software is installed.
10	The touch position does not deviate.	☐ The calibration function set up correctly.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor. Please visit our web site: https://iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS: ProLite TE8614MIS-B2AG

	Technology	Android: 40points touch Windows: 50points touch	
	Light transmission	92%	
Touch	Hardness	7H	
Screen	Thickness	3mm	
	Communication system	USB serial transfer	
	Response time	≤2.5ms	
Size Cate	egory	86"	
	Panel technology	VA	
	Size	Diagonal: 85.6" (217.43cm)	
	Pixel pitch	0.4935mm H × 0.4935mm V	
LCD Panel	Brightness	400cd/m² (Typical: with Glass), 435cd/m² (Typical: without Glass) 325cd/m² (Default / Energy Saving)	
	Contrast ratio	4000 : 1 (Typical: without glass)	
	Viewable angle	Horizontal: 89 degrees, Vertical: 89 degrees (Typical)	
	Response time	6.5ms (Typical, Gray to Gray)	
Display C	olors	Approx.1.07B	
Sync Free	quency	HDMI1/2/3/4: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz DisplayPort: Horizontal: 23.97-135.0kHz, Vertical: 24-30Hz USB-C IN: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz	
Native Re	esolution	3840 × 2160, 8.3 MegaPixels	
Supporte	d max. resolution	HDMI1/2/3/4: 3840 × 2160 60Hz (YUV420/RGB444/YUV444) DisplayPort: 3840 × 2160 30Hz USB-C IN: 3840 × 2160 60Hz	
Input Con	nector	HDMI ×4, DisplayPort ×1, USB-C ×2	
USB Standard		USB2.0 (DC5V, 500mA) ×1 (for software update) USB3.2 Gen1 (5Gbps, DC5V, 900mA) ×4 (Front: 2, Side: 2) Type C 2 (3.2 Gen1 5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 100W*1) Type C 1 (3.2 Gen1 5Gbps, 5V, 3A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 15W) Type C OUT (3.2 Gen1 5Gbps, 5V, 1A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 5W)	
Number of USB Ports Connector shape		3 : Type C 2 Upstream : Type B (for touch) 5 Downstream : Type A	
Input Audio Connector		ø 3.5mm mini jack (Stereo)	
LAN		RJ45 ×2 (in/out)	
Serial Po	rt	RS-232C In	
Input Sync Signal		Separate sync: TTL, Positive or Negative	
Input Vide	eo Signal	HDMI, DisplayPort, USB-C 3.1 Gen1 (DisplayPort 1.2)	

Input Audio Signal	2.0Vrms maximum		
Output Connector	HDMI 3840 × 2160 60Hz USB-C 3840 × 2160 60Hz		
SPDIF out Connector	SPDIF		
Output Audio connector	ø 3.5mm mini jack (Stereo)		
Speakers	Internal: 8W ×2 (Facing forward) + 18W ×2 (Facing upward) (Stereo speakers)		
iiWare Version	V12E (Android 13 OS)		
Maximum Screen Size	1895.0mm W × 1066.0mm H / 74.6" W × 42.0" H		
Power Source	100-240VAC, 50/60Hz, 6.0A		
Power Consumption*2	267W (Default / Energy Saving) Standby Mode: 0.5W maximum, Off mode: 0.3W maximum		
Dimensions / Net Weight	1957.0 × 1171.0 × 86.0mm / 77.0 × 46.1 × 3.4" (W×H×D) 63.6kg / 140.1lbs		
Environmental Considerations	Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)		
Approvals	CE. UKCA. EAC. TÜV-Bauart		

NOTE

- *1 Only available when the OPS is unplugged; otherwise it will back to 65W. It needs a full-function type C-C cable with EMARK certification.
- *2 When the USB devices are not connected.

SPECIFICATIONS: ProLite TE7514MIS-B2AG

	Technology	Android: 40points touch Windows: 50points touch
Touch	Light transmission	92%
	Hardness	7H
Screen	Thickness	3mm
	Communication system	USB serial transfer
	Response time	≤2.5ms
Size Cate	gory	75"
	Panel technology	VA
	Size	Diagonal: 74.52" (189.3cm)
	Pixel pitch	0.42975mm H × 0.42975mm V
LCD Panel	Brightness	400cd/m² (Typical: with Glass), 435cd/m² (Typical: without Glass) 280cd/m² (Default / Energy Saving)
	Contrast ratio	5000 : 1 (Typical: without glass)
	Viewable angle	Horizontal : 89 degrees, Vertical: 89 degrees (Typical)
	Response time	8ms (Typical, Gray to Gray)
Display C	olors	Approx.1.07B
Sync Free	quency	HDMI1/2/3/4: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz DisplayPort: Horizontal: 23.97-135.0kHz, Vertical: 24-30Hz USB-C IN: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz
Native Re	esolution	3840 × 2160, 8.3 MegaPixels
Supporte	d max. resolution	HDMI1/2/3/4: 3840 × 2160 60Hz (YUV420/RGB444/YUV444) DisplayPort: 3840 × 2160 30Hz USB-C IN: 3840 × 2160 60Hz
Input Cor	nector	HDMI ×4, DisplayPort ×1, USB-C ×2
USB Standard		USB2.0 (DC5V, 500mA) ×1 (for software update) USB3.2 Gen1 (5Gbps, DC5V, 900mA) ×4 (Front: 2, Side: 2) Type C 2 (3.2 Gen1 5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 100W*1) Type C 1 (3.2 Gen1 5Gbps, 5V, 3A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 15W) Type C OUT (3.2 Gen1 5Gbps, 5V, 1A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 5W)
Number of USB Ports Connector shape		3 : Type C 2 Upstream : Type B (for touch) 5 Downstream : Type A
Input Audio Connector		ø 3.5mm mini jack (Stereo)
LAN		RJ45 ×2 (in/out)
Serial Port		RS-232C In
Input Syn	c Signal	Separate sync: TTL, Positive or Negative
Input Vide	eo Signal	HDMI, DisplayPort, USB-C 3.1 Gen1 (DisplayPort 1.2)
Input Audio Signal		2.0Vrms maximum
Output Connector		HDMI 3840 × 2160 60Hz USB-C 3840 × 2160 60Hz

SPDIF out Connector	SPDIF							
Output Audio connector	ø 3.5mm mini jack (Stereo)							
Speakers	Internal: 8W ×2 (Facing forward) + 18W ×2 (Facing upward) (Stereo speakers)							
iiWare Version	V12E (Android 13 OS)							
Maximum Screen Size	1650.0mm W × 928.0mm H / 65.0" W × 36.5" H							
Power Source	100-240VAC, 50/60Hz, 5.0A							
Power Consumption*2	209W (Default / Energy Saving) Standby Mode: 0.5W maximum, Off mode: 0.3W maximum							
Dimensions / Net Weight	1709.0 × 1031.0 × 86.0mm / 67.3 × 40.6 × 3.4" (W×H×D) 51.5kg / 113.4lbs							
Environmental Considerations	Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)							
Approvals	CE, UKCA, EAC, TÜV-Bauart							



^{*1} Only available when the OPS is unplugged; otherwise it will back to 65W. It needs a full-function type C-C cable with EMARK certification.

^{*2} When the USB devices are not connected.

SPECIFICATIONS: ProLite TE6514MIS-B2AG

	Technology	Android: 40points touch Windows: 50points touch					
Touch Screen	Light transmission	92%					
	Hardness	7H					
	Thickness	3mm					
	Communication system	USB serial transfer					
	Response time	≤2.5ms					
Size Cate	egory	65"					
	Panel technology	VA					
	Size	Diagonal: 64.5" (163.9cm)					
	Pixel pitch	0.372mm H × 0.372mm V					
LCD Panel	Brightness	400cd/m² (Typical: with Glass), 435cd/m² (Typical: without Glass) 255cd/m² (Default / Energy Saving)					
	Contrast ratio	4000 : 1 (Typical: without glass)					
	Viewable angle	Horizontal: 89 degrees, Vertical: 89 degrees (Typical)					
	Response time	6.5ms (Typical, Gray to Gray)					
Display 0	Colors	Approx.1.07B					
Sync Fre	quency	HDMI1/2/3/4: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz DisplayPort: Horizontal: 23.97-135.0kHz, Vertical: 24-30Hz USB-C IN: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz					
Native R	esolution	3840 × 2160, 8.3 MegaPixels					
Supporte	ed max. resolution	HDMI1/2/3/4: 3840 × 2160 60Hz (YUV420/RGB444/YUV444) DisplayPort: 3840 × 2160 30Hz USB-C IN: 3840 × 2160 60Hz					
Input Connector		HDMI ×4, DisplayPort ×1, USB-C ×2					
USB Standard		USB2.0 (DC5V, 500mA) ×1 (for software update) USB3.2 Gen1 (5Gbps, DC5V, 900mA) ×4 (Front: 2, Side: 2) Type C 2 (3.2 Gen1 5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 100W*¹) Type C 1 (3.2 Gen1 5Gbps, 5V, 3A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 15W) Type C OUT (3.2 Gen1 5Gbps, 5V, 1A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 5W)					
Number of USB Ports Connector shape		3 : Type C 2 Upstream : Type B (for touch) 5 Downstream : Type A					
Input Audio Connector		ø 3.5mm mini jack (Stereo)					
LAN		RJ45 ×2 (in/out)					
Serial Port		RS-232C In					
Input Sync Signal		Separate sync: TTL, Positive or Negative					
Input Video Signal		HDMI, DisplayPort, USB-C 3.1 Gen1 (DisplayPort 1.2)					
Input Aud	dio Signal	2.0Vrms maximum					
Output Connector		HDMI 3840 × 2160 60Hz USB-C 3840 × 2160 60Hz					


SPDIF out Connector	SPDIF							
Output Audio connector	ø 3.5mm mini jack (Stereo)							
Speakers	Internal: 8W ×2 (Facing forward) + 18W ×2 (Facing upward) (Stereo speakers)							
iiWare Version	V12E (Android 13 OS)							
Maximum Screen Size	1428.5mm W × 803.5mm H / 56.2" W × 31.6" H							
Power Source	100-240VAC, 50/60Hz, 4.0A							
Power Consumption*2	150W (Default / Energy Saving) Standby Mode: 0.5W maximum, Off mode: 0.3W maximum							
Dimensions / Net Weight	1488.0 × 908.0 × 86.0mm / 58.6 × 35.7 × 3.4" (W×H×D) 39.0kg / 86.0lbs							
Environmental Considerations	Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)							
Approvals	CE, UKCA, EAC, TÜV-Bauart							


NOTE

^{*1} Only available when the OPS is unplugged; otherwise it will back to 65W. It needs a full-function type C-C cable with EMARK certification.

^{*2} When the USB devices are not connected.


DIMENSIONS: ProLite TE8614MIS

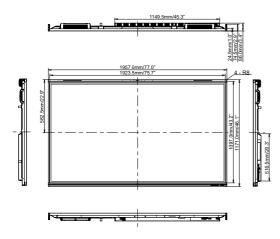


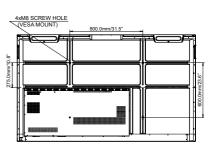


■ ENGLISH

DIMENSIONS: ProLite TE7514MIS

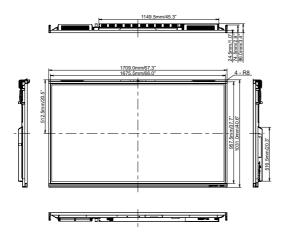

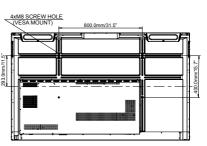

DIMENSIONS: ProLite TE6514MIS

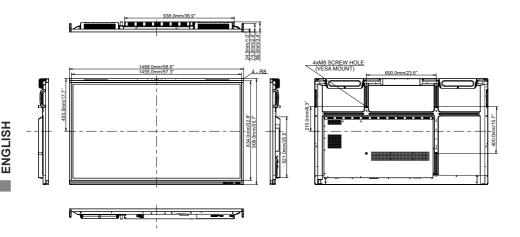

COMPLIANT TIMING

Timing		fH(kHz)	fV(Hz)	Dot clock (MHz)	HDMI1	HDMI2	HDMI3	HDMI4	DisplayPort	Type C1	Type C2	
	VGA 640x480		31.5	60.0	25.175	<u> </u>	<u> </u>	Q	0	0	0	
	SVGA 800		37.9	60.0	40.000	<u> </u>	<u> </u>	<u> </u>				
	XGA 1024x768 QVGA 1280x960 SXGA 1280x1024		48.4	60.0	65.000							
			64.0	60.0	108.000				0	0	0	
			64.0	60.0	108.000							
	WXGA 13		47.7	60.0	85.500							
	CVT 1440		55.9	60.0	106.500							
VESA	UXGA 168	30x1050	65.3	60.0	146.250							
VESA	FHD 1920x1080		67.5	60.0	148.500							
	2048x1152		70.9	60.0	156.750			0				
	2560x1080		66.0	60.0	198.000							
	2560x144	0	88.8	60.0	241.700			0				
	2560x160	0	98.7	60.0	268.500		0	0				
	3200x180	0	111.1	60.0	391.140							
	4K 3840x2160		67.5	30.0	297.000							
			135.0	60.0	594.000							
IBM	720x400		31.5	70.0	28.320							
	480i	60Hz	15.7	60.0	27.000			0				
SD	576i	50Hz	15.6	50.0	13.500							
SD	480p	60Hz	31.5	60.0	27.000				0	0	0	
	576p	50Hz	31.3	50.0	27.000							
	720p	50Hz	37.5	50.0	27.000							
		60Hz	45.0	60.0	74.250			0				
HD	1080i	50Hz	28.1	50.0	74.250							
НО		60Hz	33.7	60.0	74.250	0	0	Ó				
	1080p	50Hz	56.3	50.0	148.500		0	Ó				
		60Hz	67.5	60.0	148.500							

^{*}means supported the timing.