


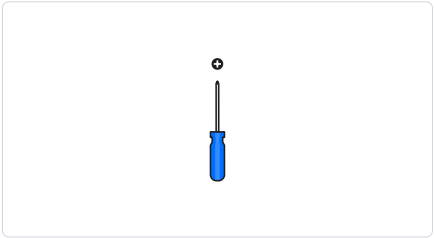
 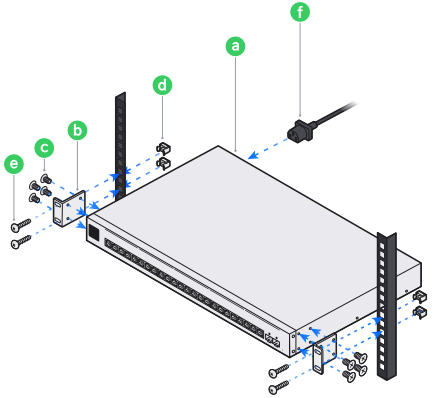


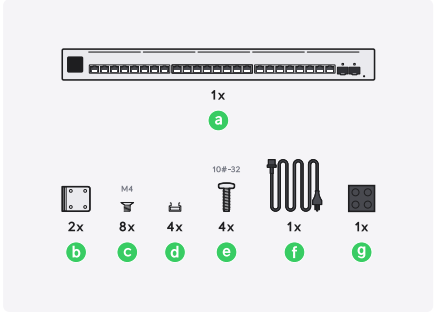



Pro Max 24

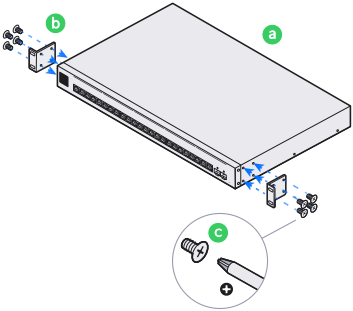



1




 
2

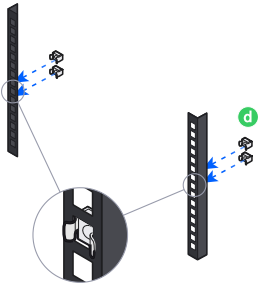



3

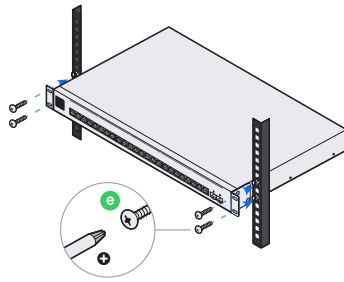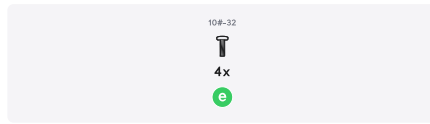


4

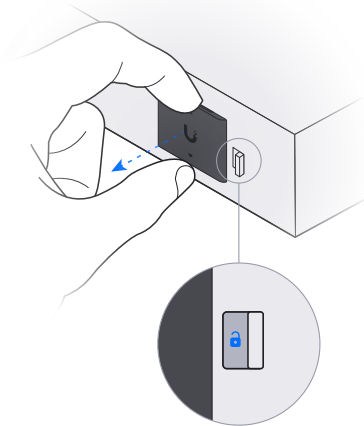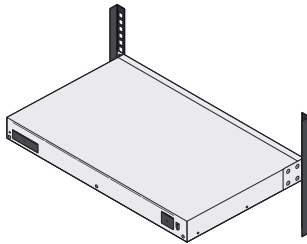


5

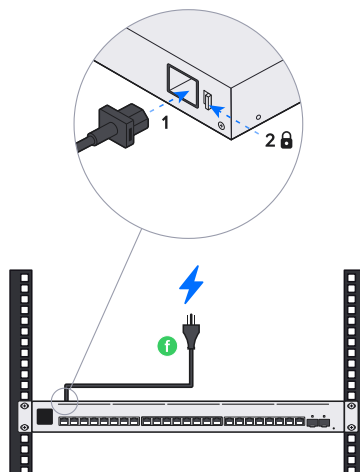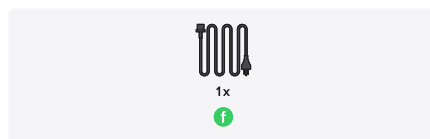

6

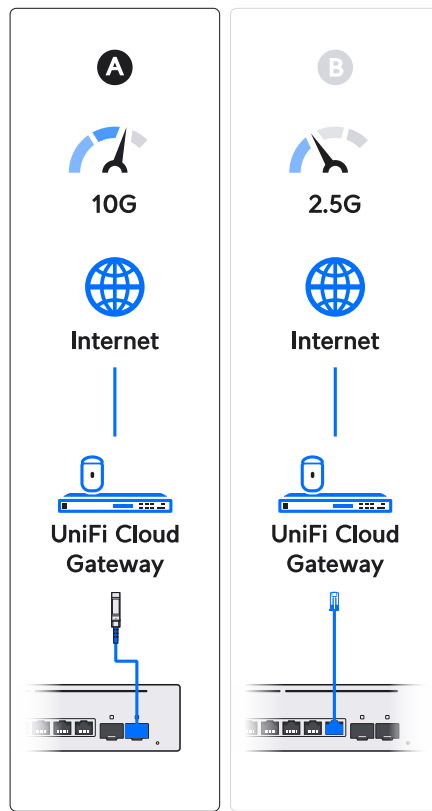

7

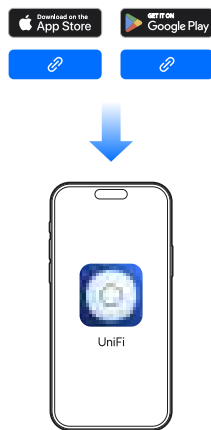

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).

© 2023 Ubiquiti, Inc. All rights reserved. Ubiquiti, the Ubiquiti logo and UniFi are trademarks or registered trademarks of Ubiquiti, Inc. in the United States and/or other countries. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. All other marks are the property of their respective owners. Ubiquiti, the Ubiquiti logo and UniFi are trademarks of Ubiquiti, Inc. in the United States and/or other countries.